

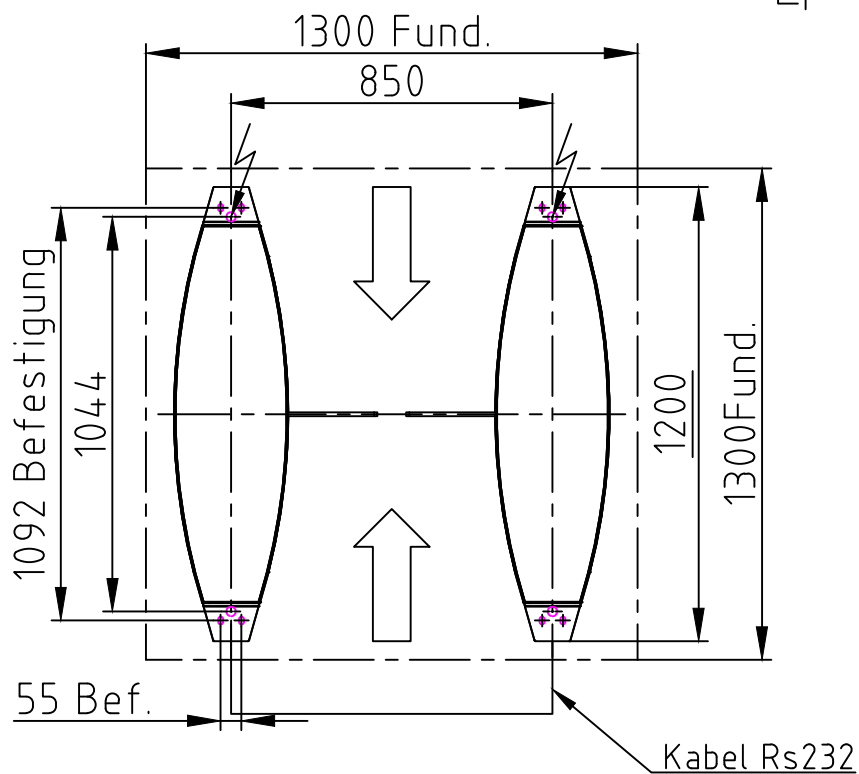
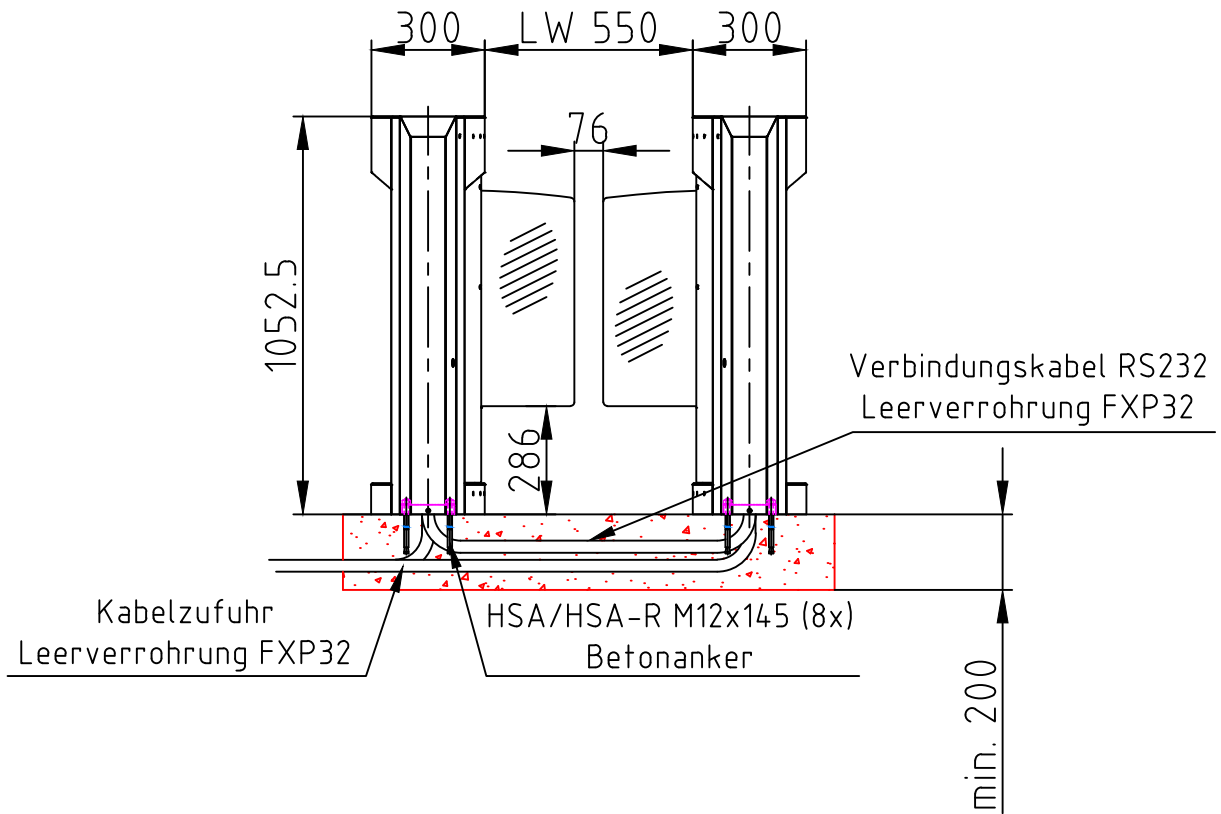



Maßblatt Selection DF 1-Spur LW 550
1:20 Montage FFOK

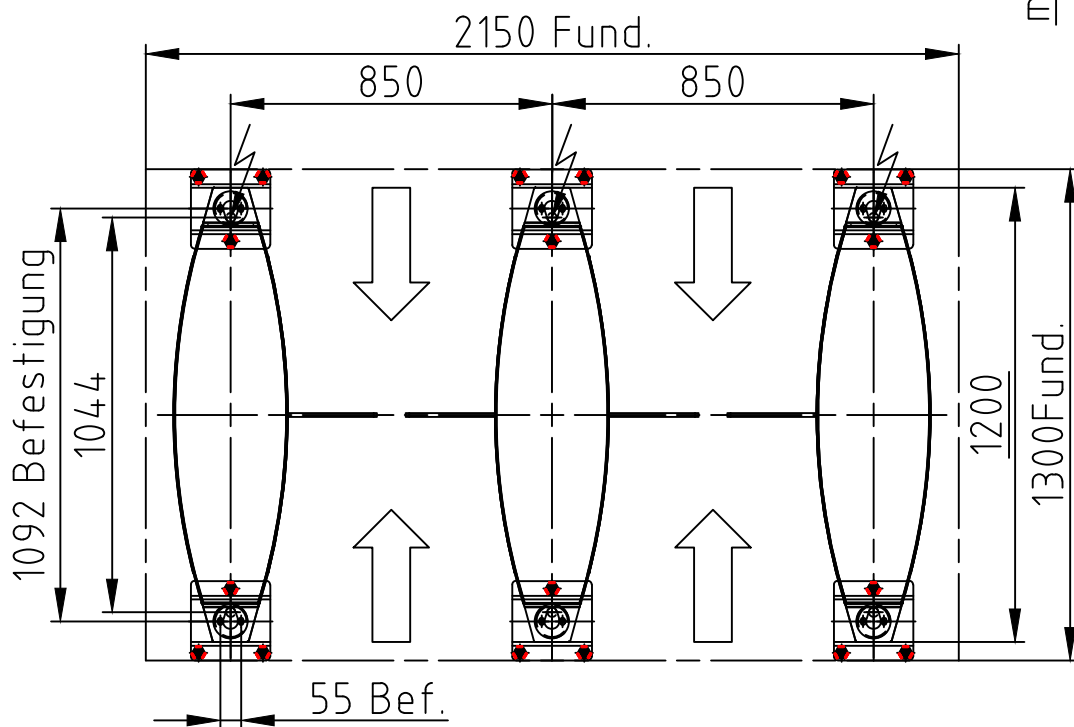



Maßblatt Selection DF 2-Spur LW 550
 1:20 Montage auf Fundamentkonsolen

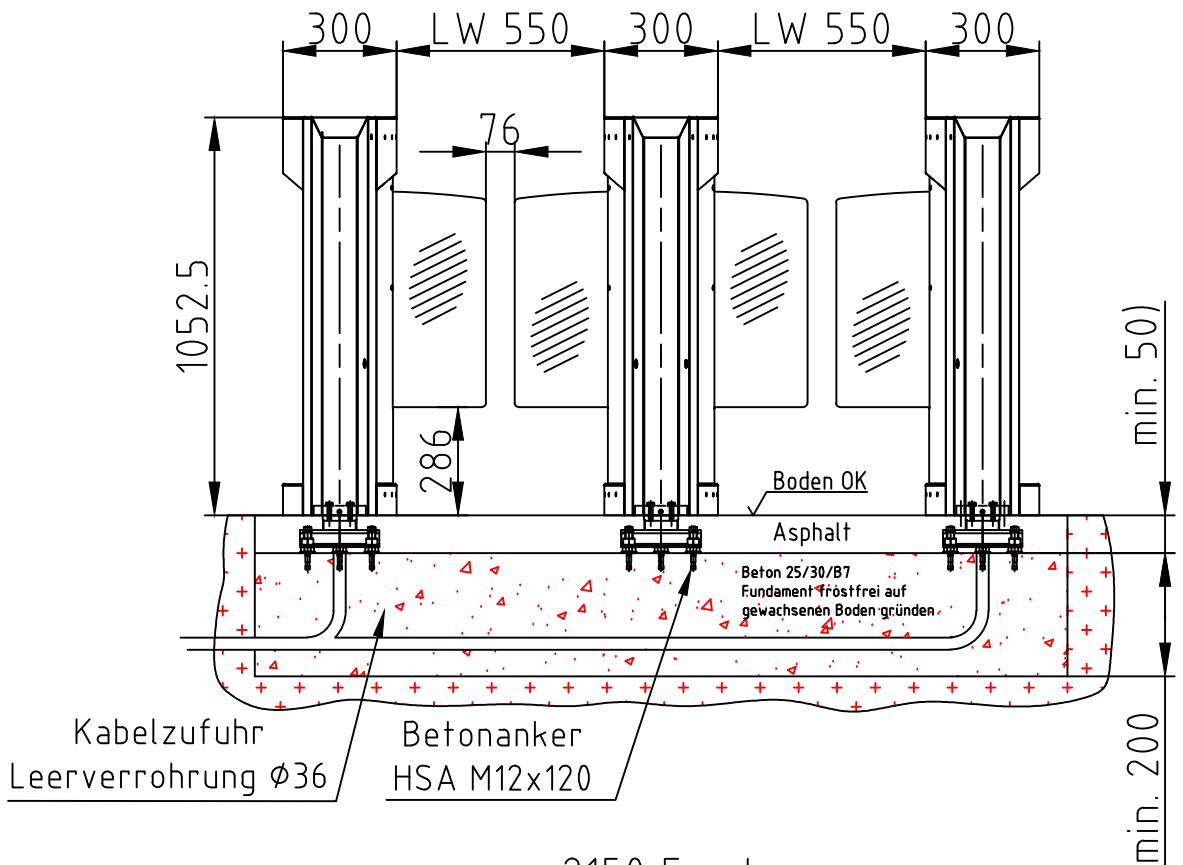


Maßblatt Selection DF 2-Spur LW 550
 1:20 Montage FFOK

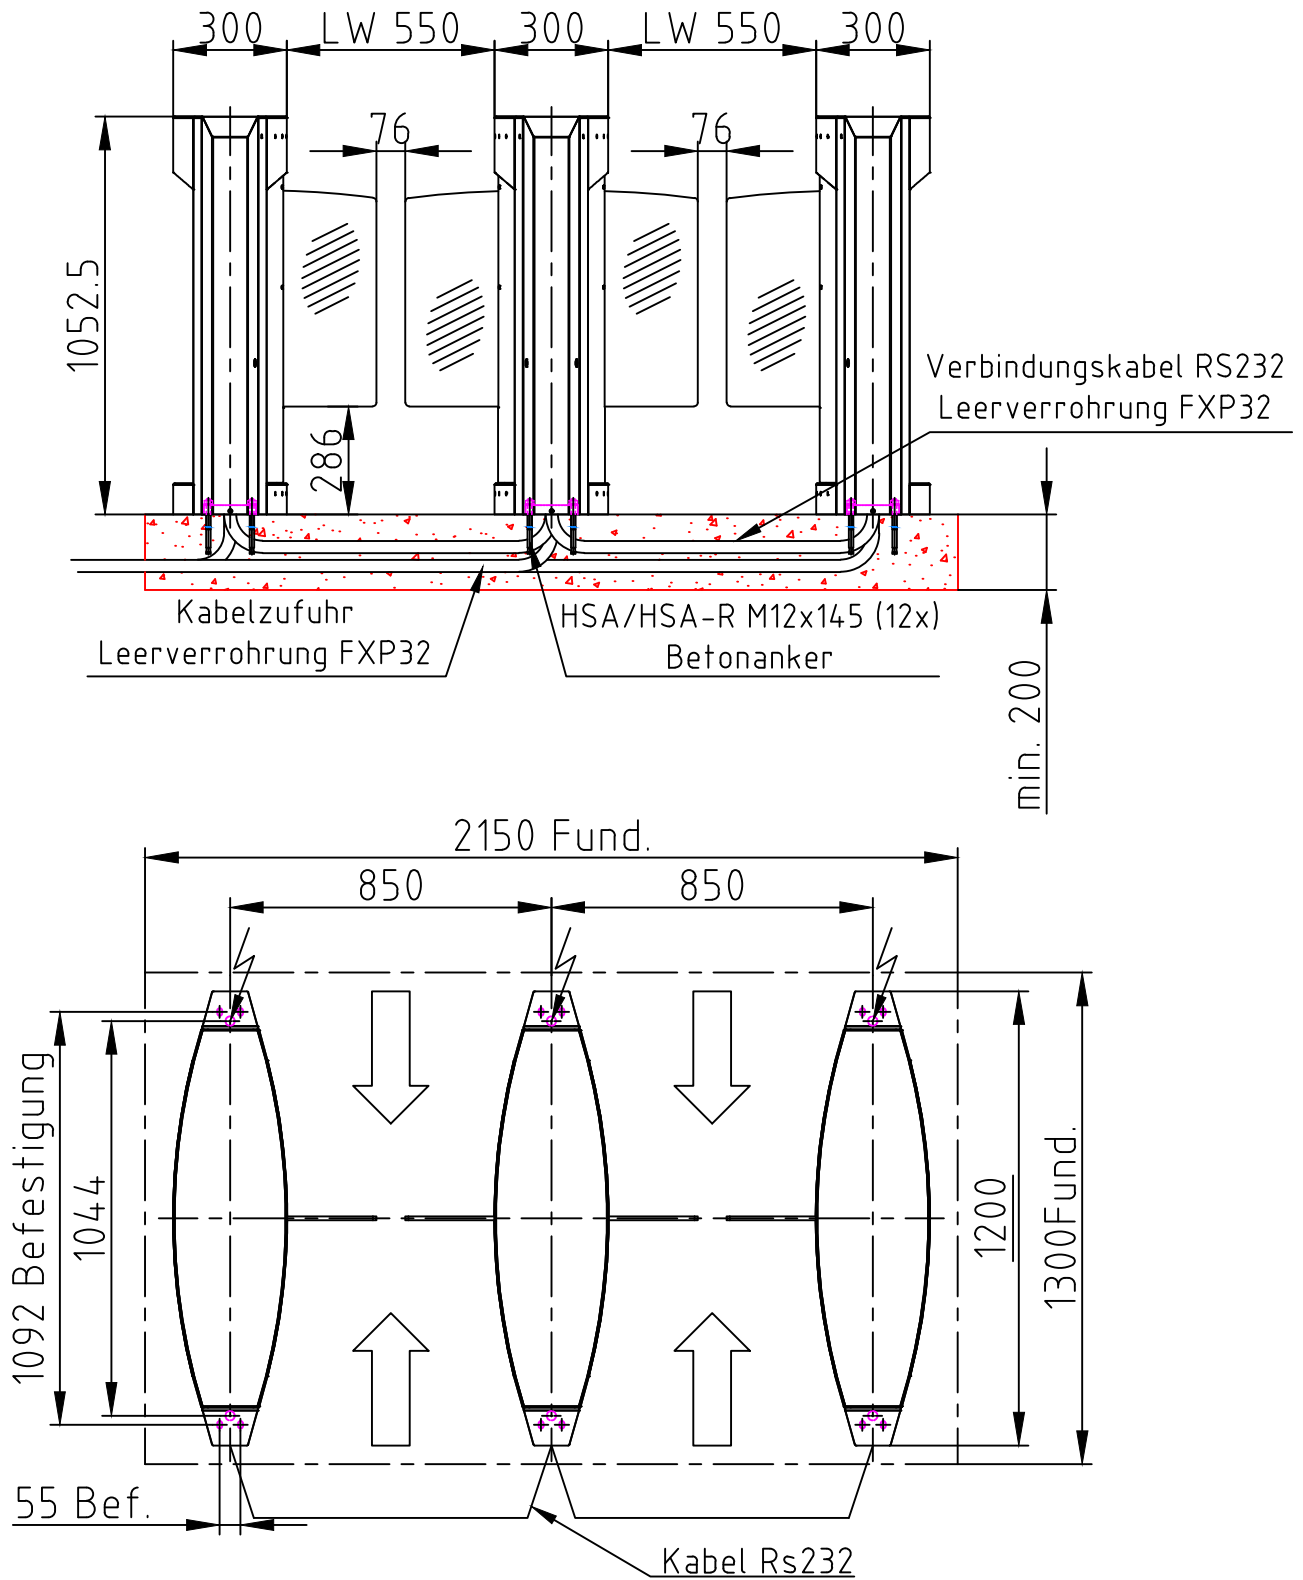



Maßblatt Selection DF 1-Spur LW 900
 1:20 Montage FFOK

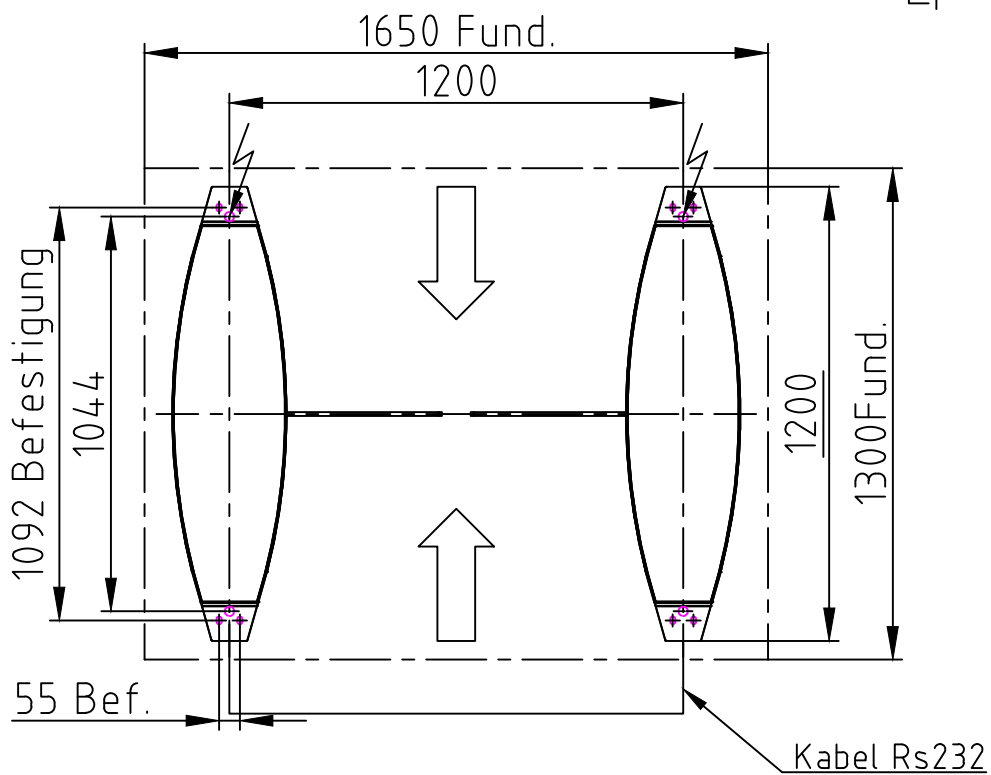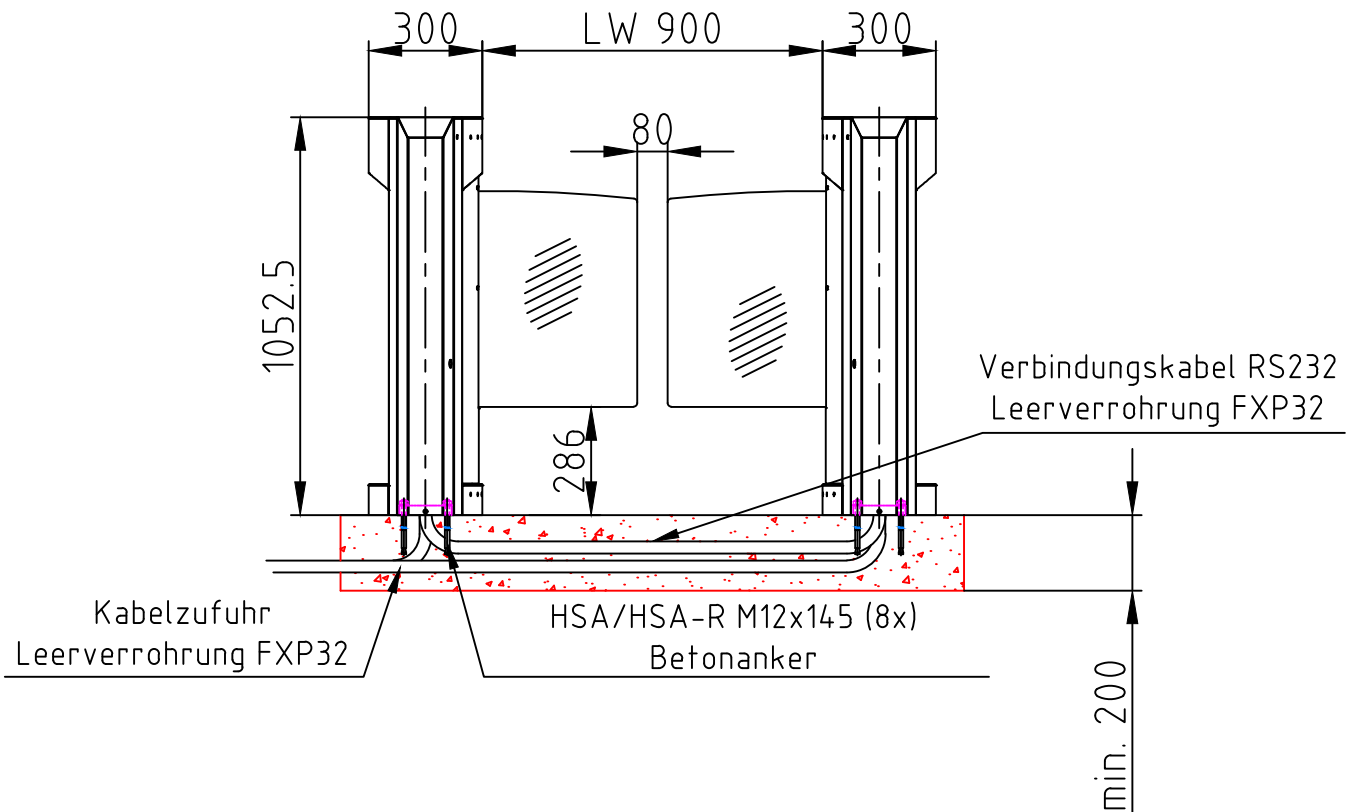


Maßblatt Selection DF 2-Spur LW 900
 1:20 Montage FFOK

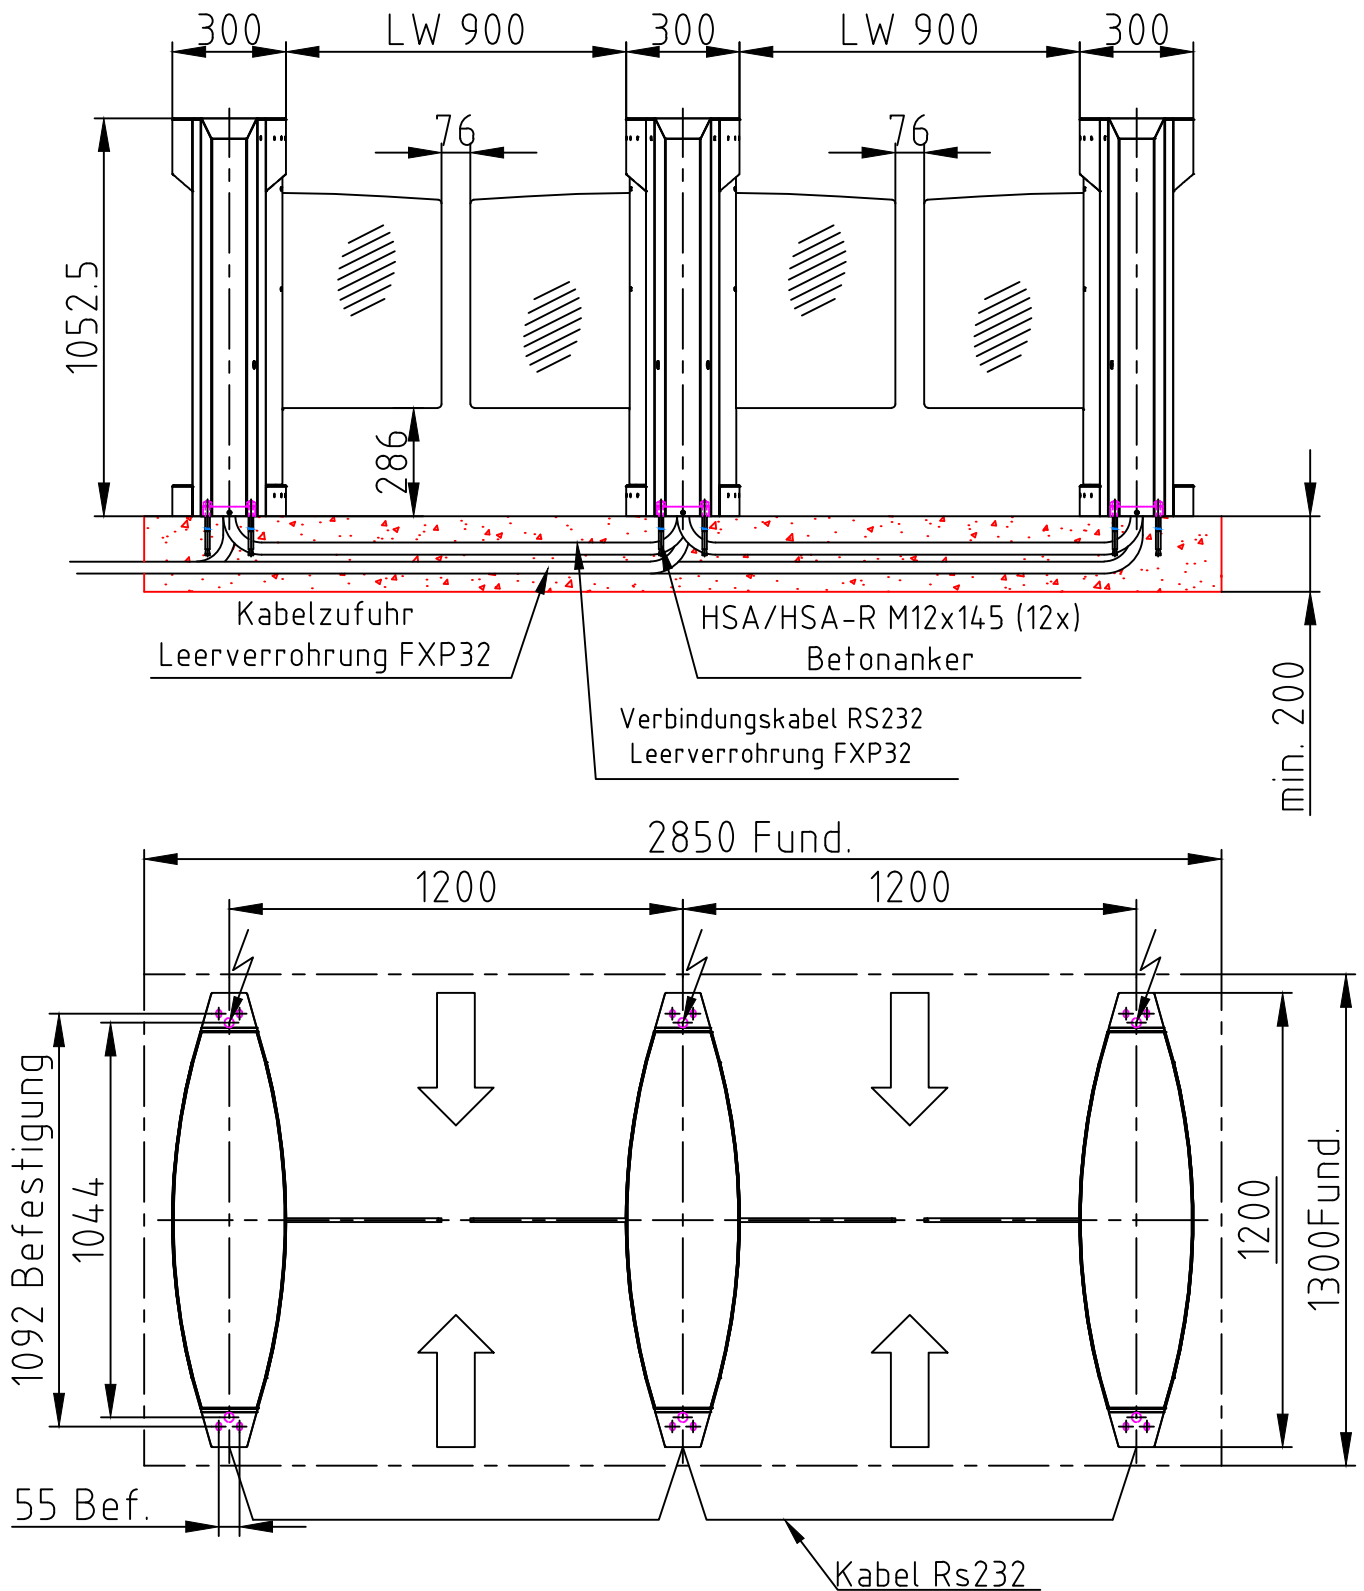



Maßblatt Selection DF 2-Spur LW 550-900
 1:20 Montage FFOK

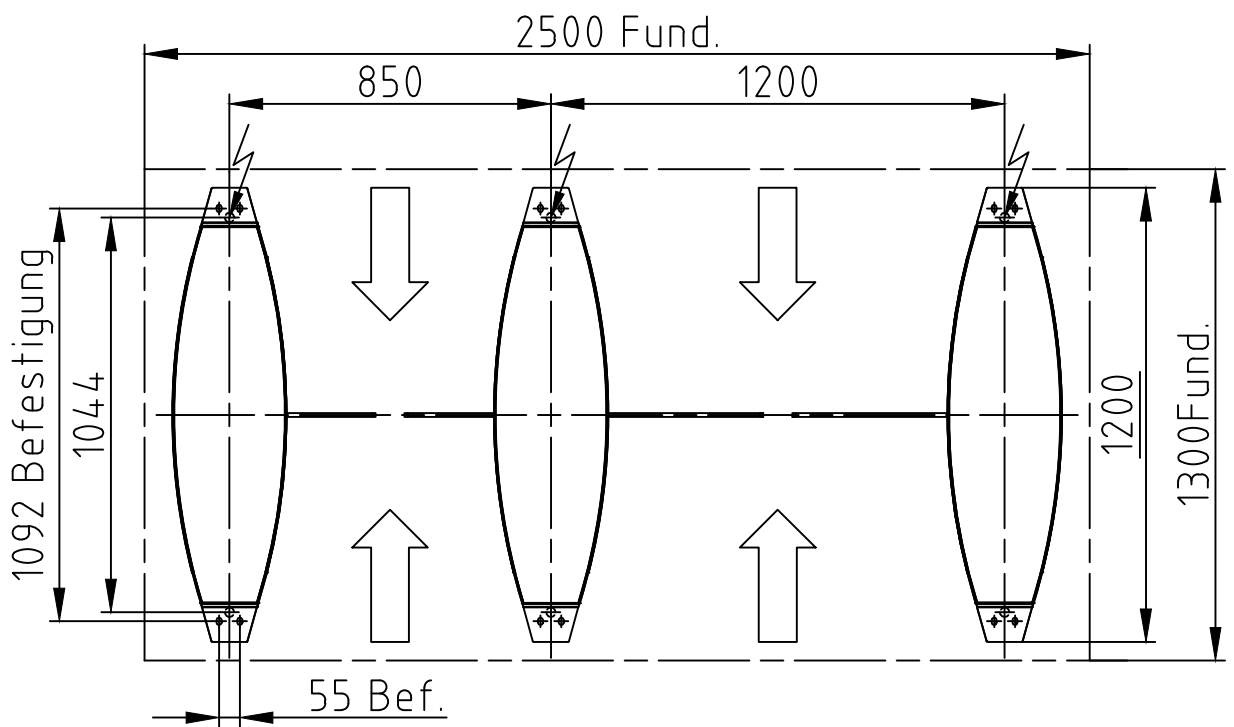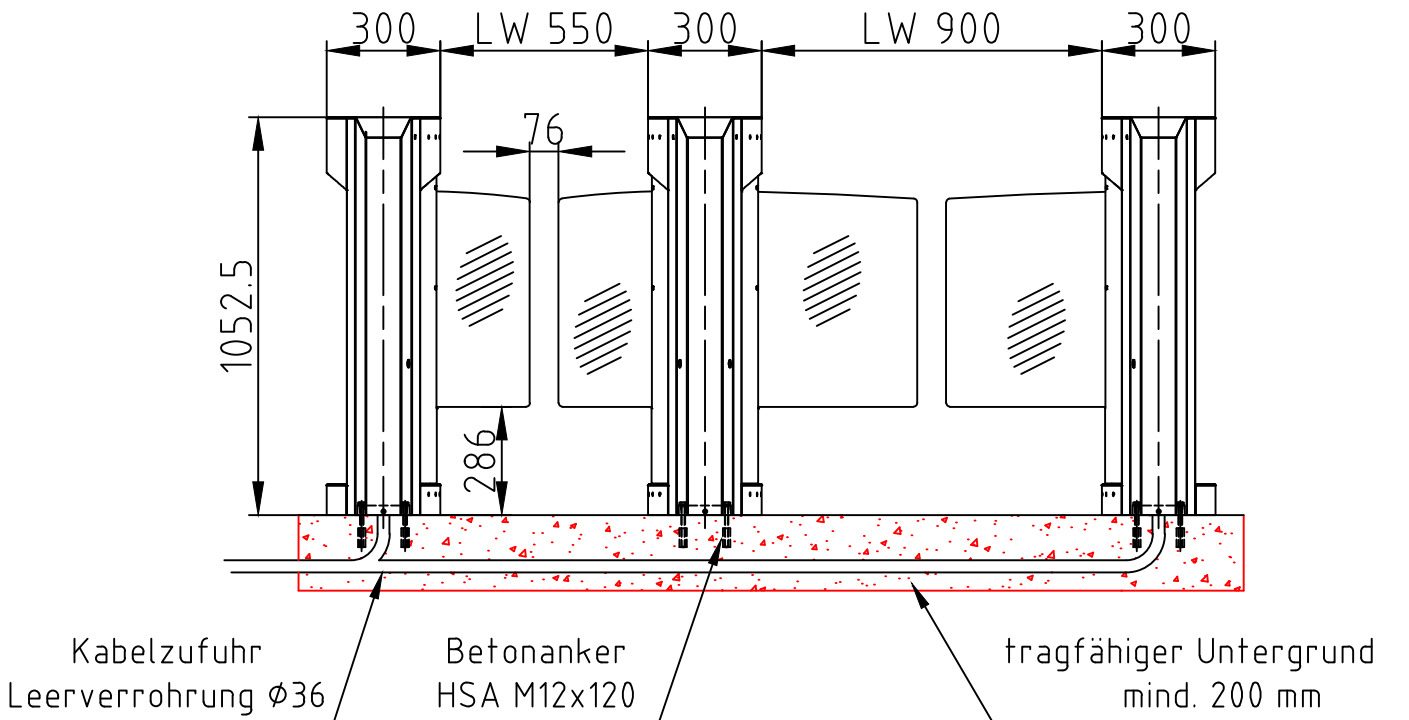



Maßblatt Selection DF12 2-Spur LW 550
 1:20 Montage FFOK

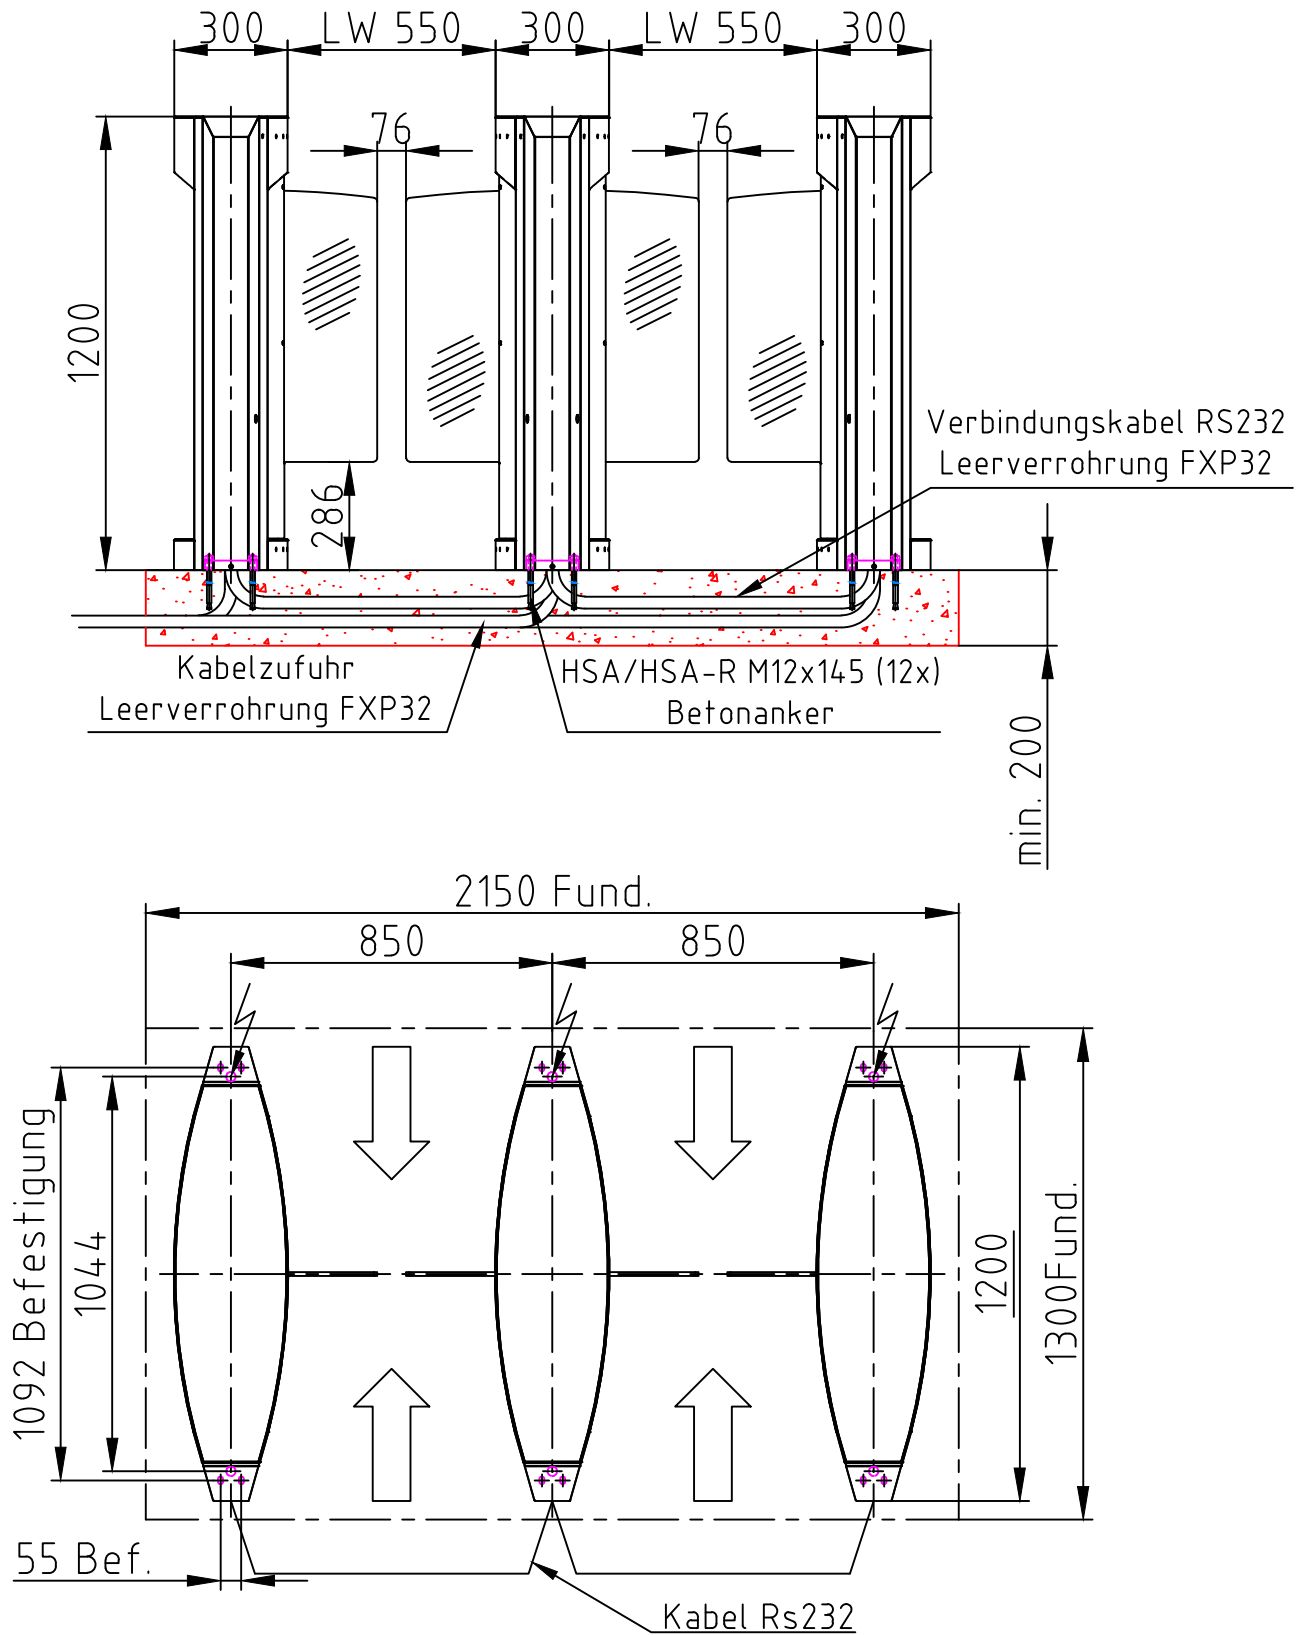

Maßblatt Selection DF12 1-Spur LW 550
1:20 Montage FFOK

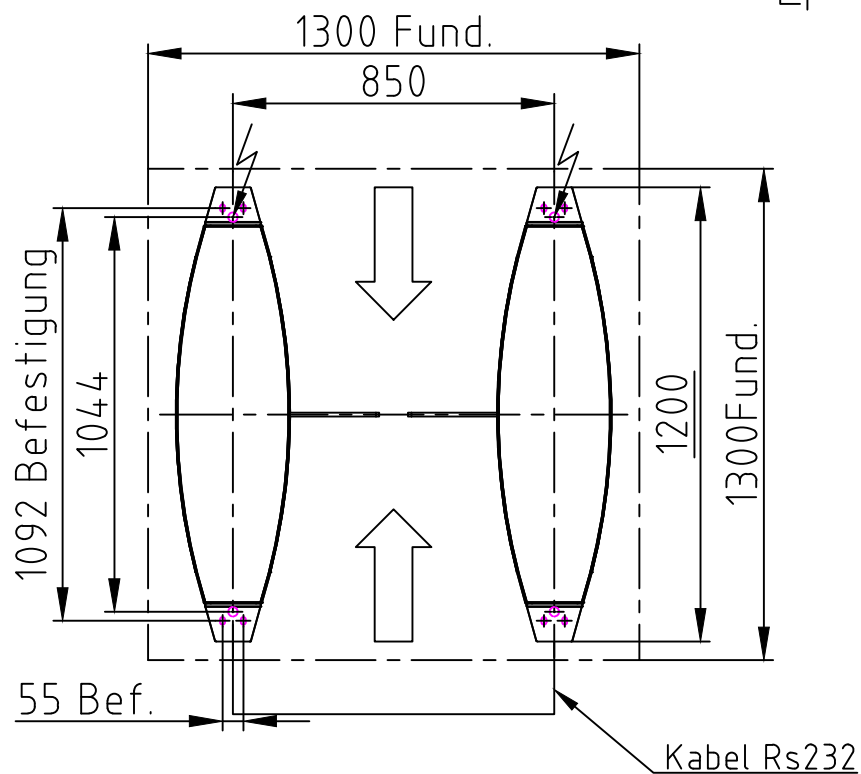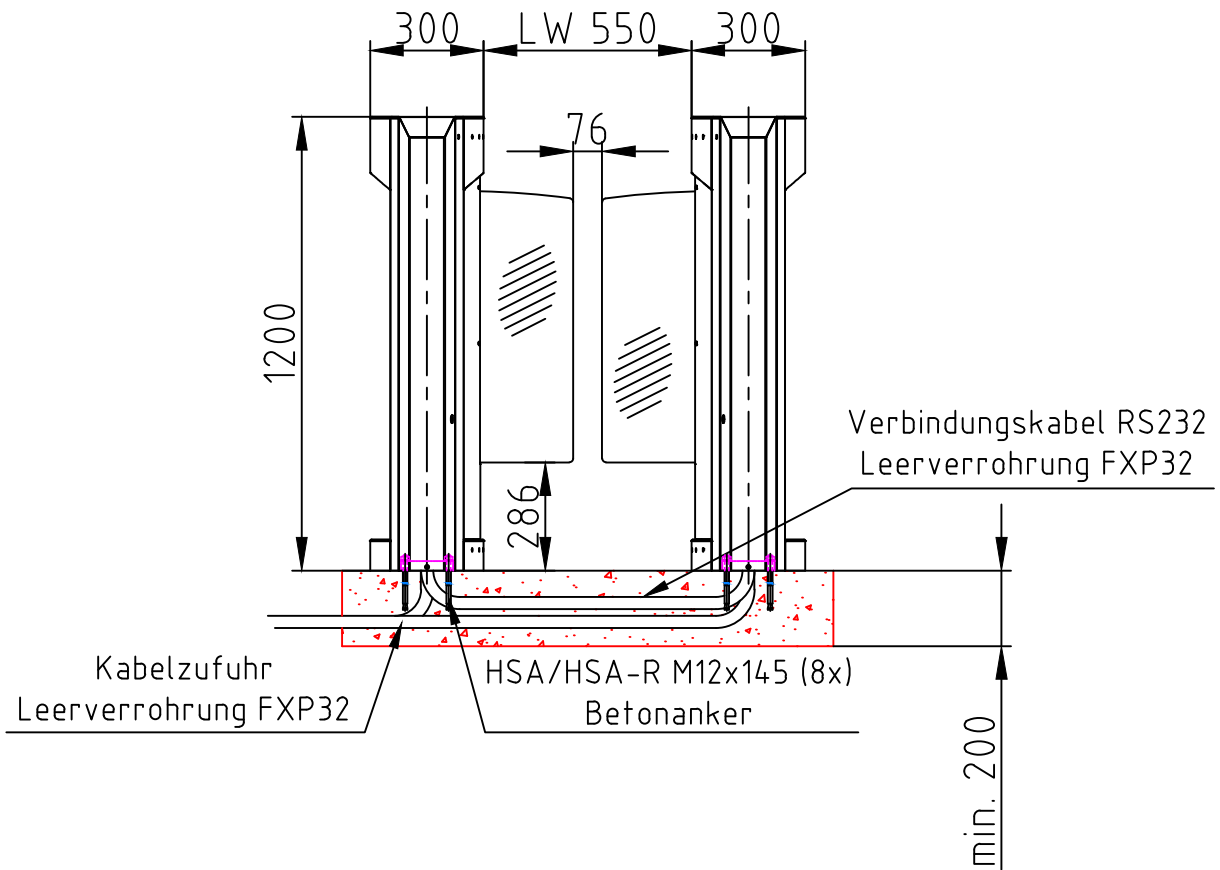

Maßblatt Selection DF12 1-Spur LW 900
1:20 Montage FFOK

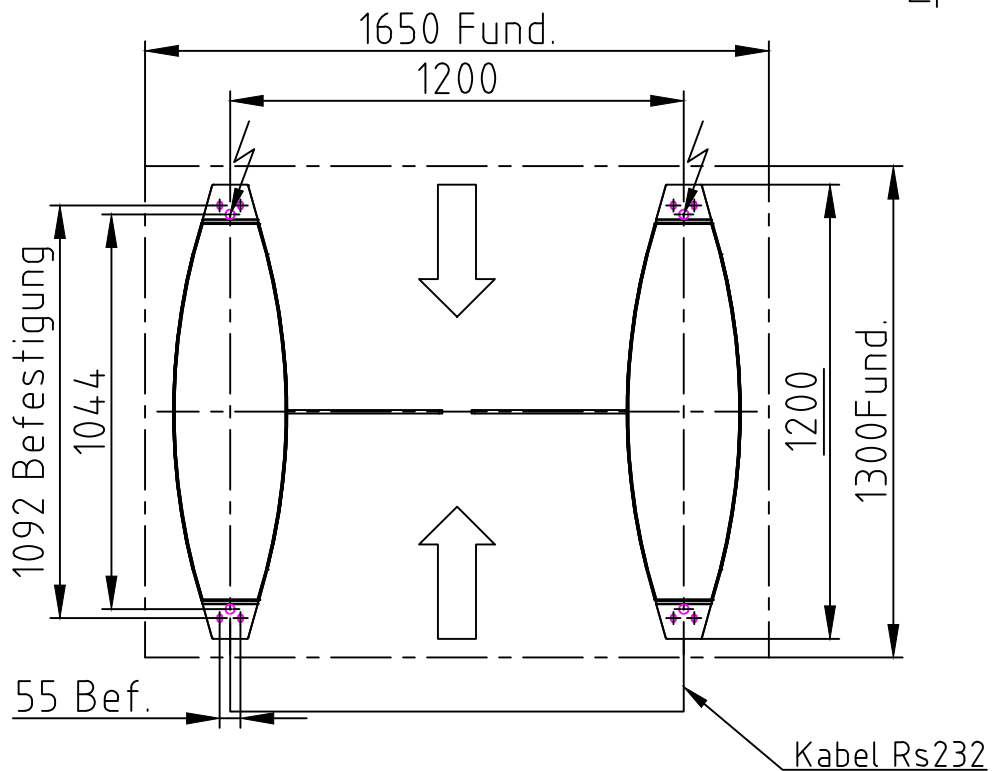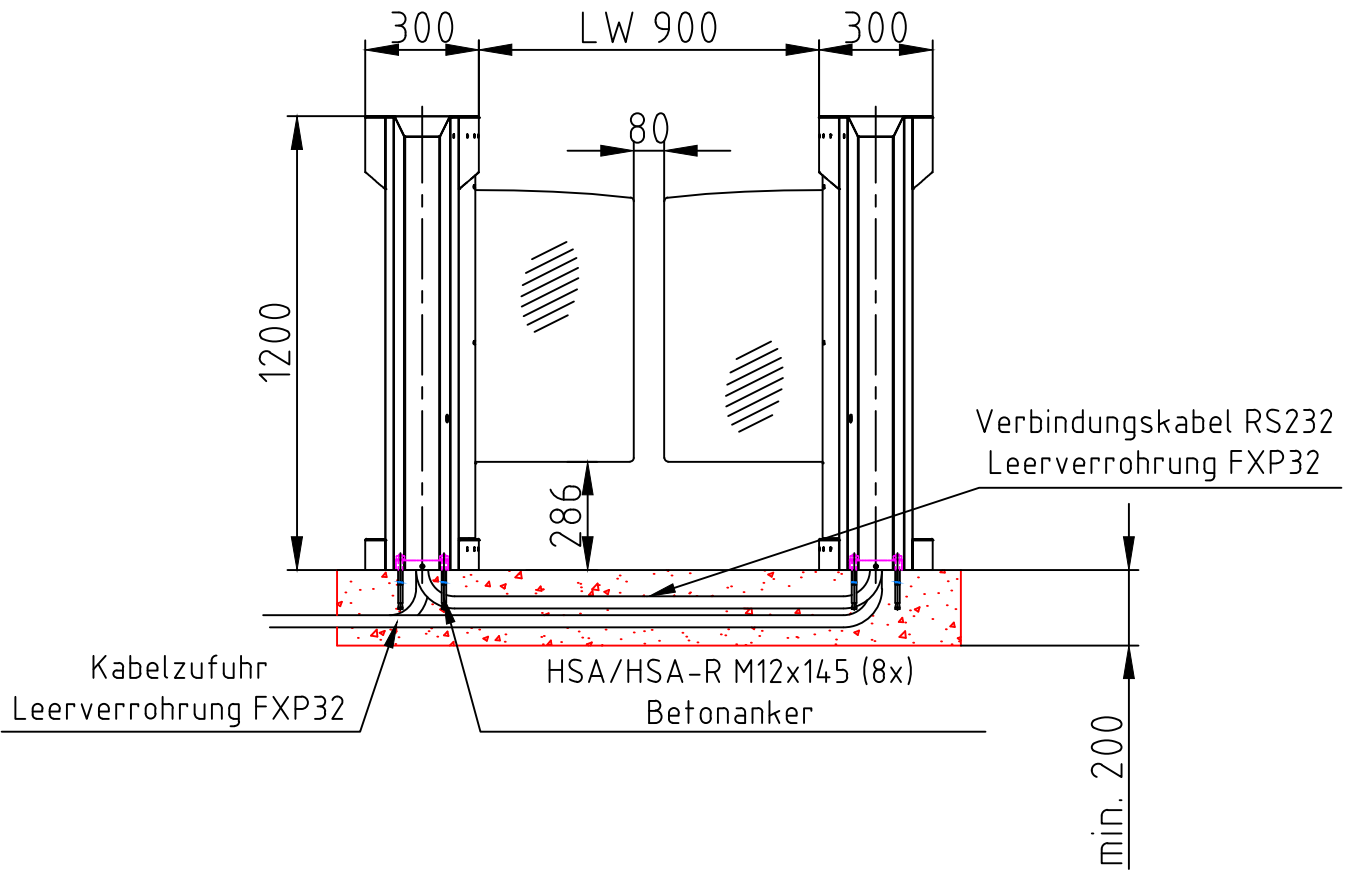

Maßblatt Selection DF12 2-Spur LW 900
 1:20 Montage FFOK

